

BMS Oil Catch Can for 2024+ Toyota Tacoma 2.4L Turbo Install Guide

Last updated 11/21/2024

Use subject to terms and conditions posted at <https://burgertuning.com/pages/terms>


THIS PART IS LEGAL FOR USE ONLY IN COMPETITION RACING VEHICLES AS DEFINED UNDER CALIFORNIA LAW AND IS NOT LEGAL FOR USE IN ANY OTHER MOTOR VEHICLE. California law defines a "racing vehicle" as "a competition vehicle not used on public highways." (Calif. Health & Safety Code 39048) This part may only be used on competition racing vehicles operated exclusively on a closed course in conjunction with a sanctioned racing event. Competition-only motor vehicles may not be driven to a racing event on a public highway and must be transported on a trailer or other carrier. USE OF THIS PART IN ANY OTHER VEHICLE MAY SUBJECT YOU TO FINES AND PENALTIES FOR VIOLATION OF FEDERAL AND/OR STATE LAW, WILL VOID YOUR WARRANTY FROM BURGER MOTORSPORTS, INC, AND CAN VOID YOUR VEHICLE'S WARRANTY. It is your responsibility to comply with all applicable federal and state laws relating to the use of this part, and Burger Motorsports, INC hereby disclaims any liability resulting from the failure to use this part in compliance with all applicable federal and state laws.




Locate the two areas that the catch can and bracket will connect to in the engine compartment.



Remove the two 10mm bracket screws along with the washers.

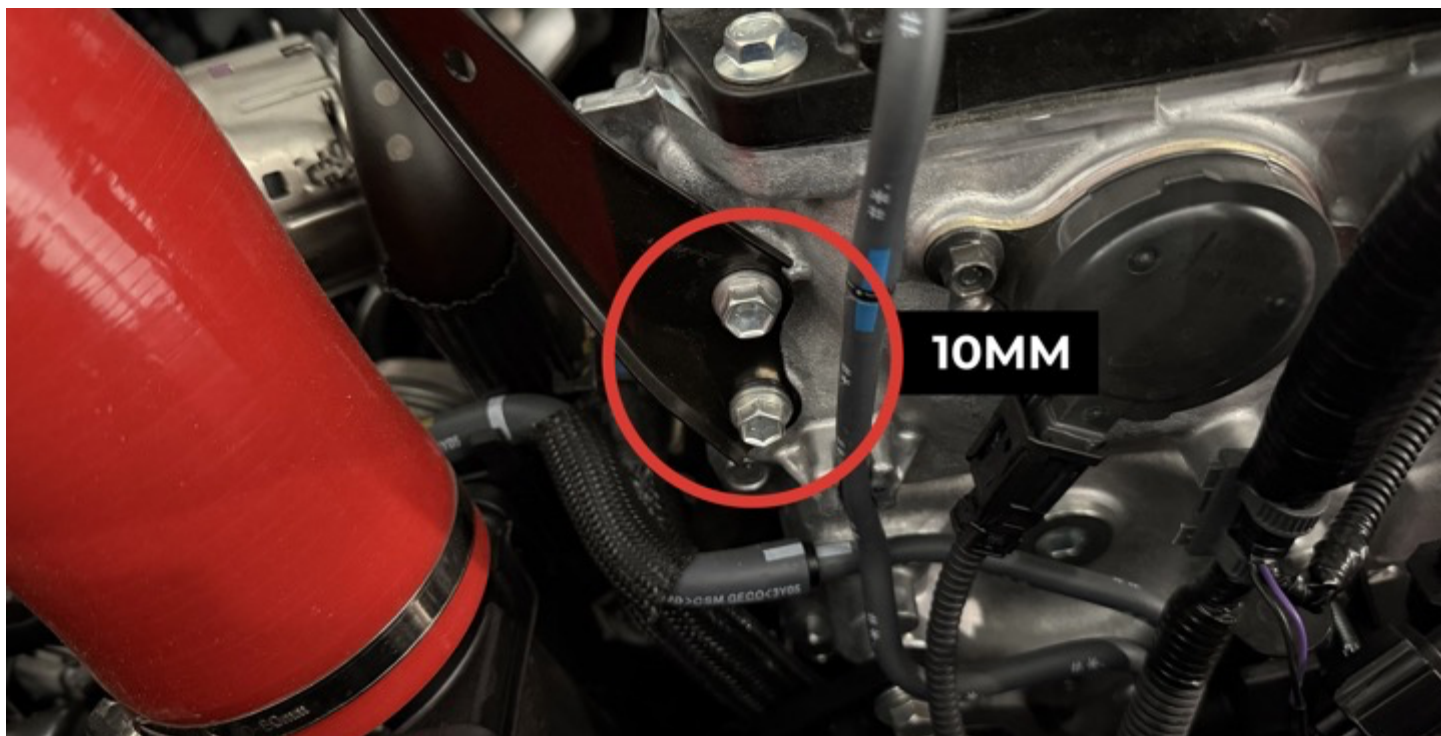

Remove the PCV hose by pinching the clamp and sliding the clamp off the nipple and then carefully pulling the hose off.

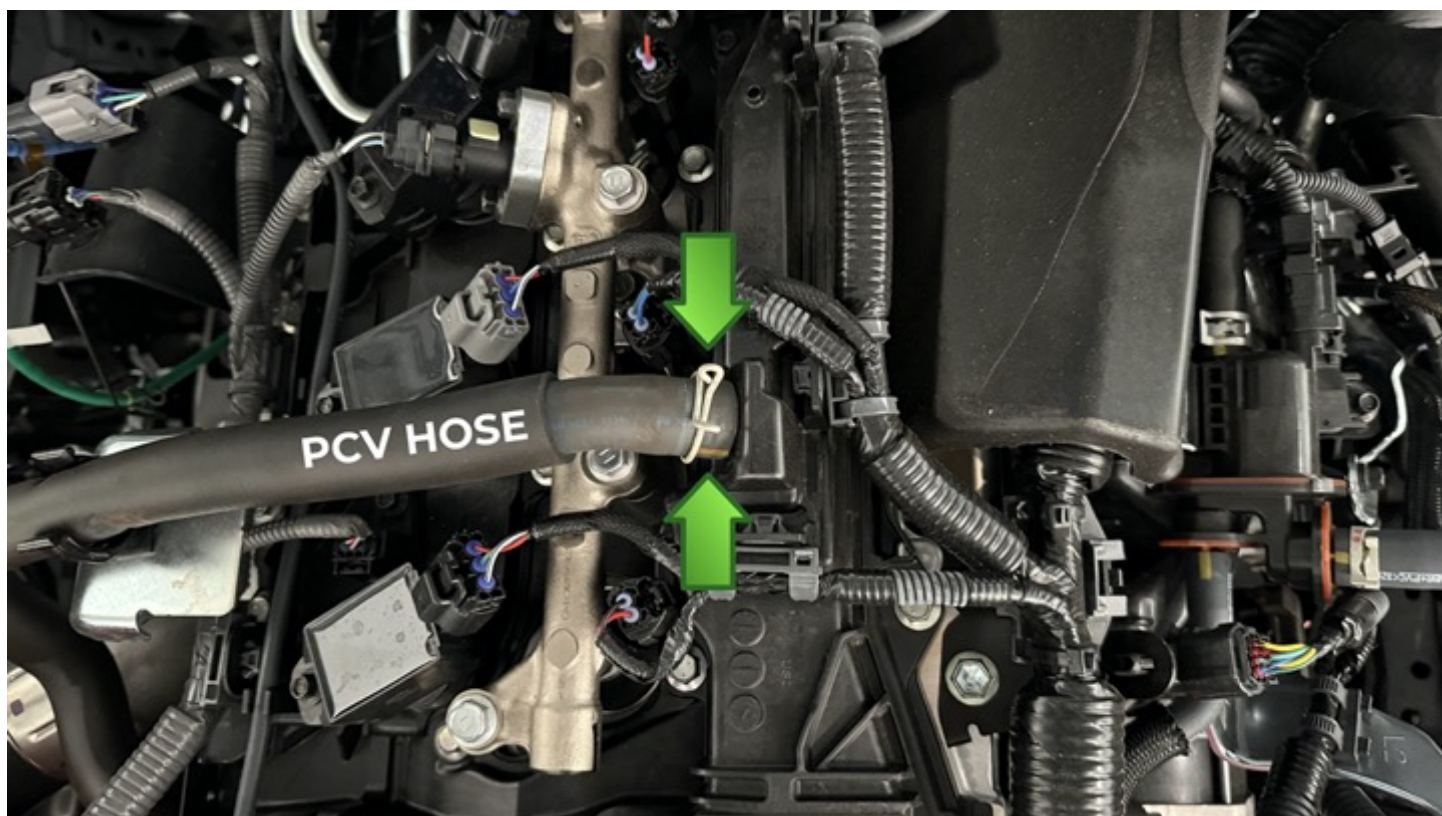

Assemble the bracket and catch can together and tighten all 6 of the hex bolts.



Attach the bracket to the engine above the factory bracket starting with the bottom bolt.



Connect the provided silicone hose to the PCV out fitting and to the can "IN" fitting.



Adjust the factory PCV hose in the holder so it doesn't restrict airflow.



Be sure can base is tight. Installation complete! Check and empty contents every oil change.