





KIT CONTENTS:

1. Harness


2. Illuminated Logo

3. Wire Ties (5)

4. Foam Pads (2)

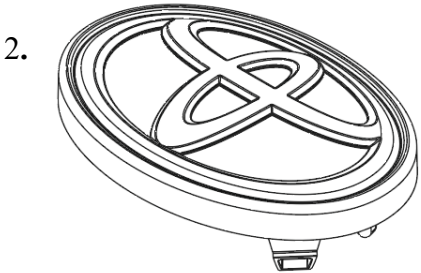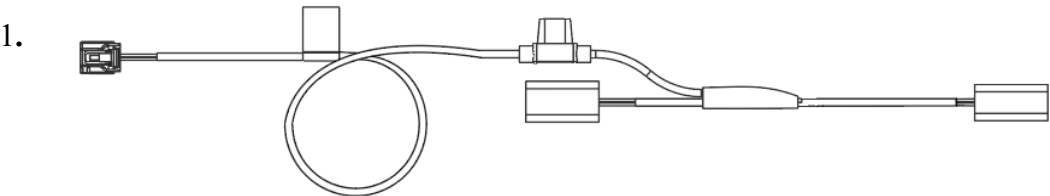

Attention!  
Logos are meant for specific grilles:  
  
PT413-35240 - TRD SPORT, TRD OFF ROAD  
PT413-35250 - SR5

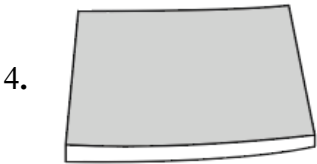

TOOLS:






1. Ratchet

2. Socket


3. Cutters

4. Panel Tool

5. Lint Free Cloth

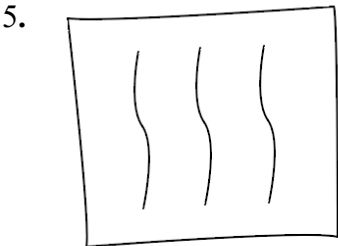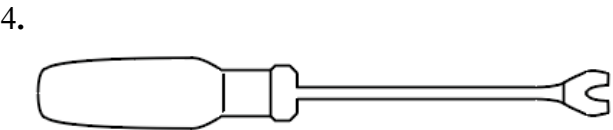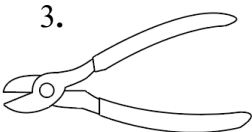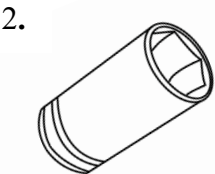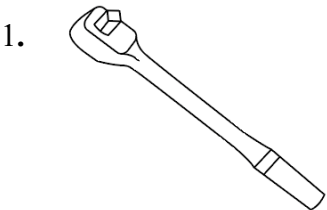


- 1 Using a ratchet and socket, disconnect ground terminal from battery.


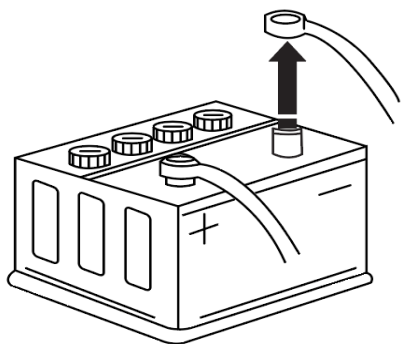


Caution: Shock hazard present


- 2 Using a panel tool, remove four (4) push-clips securing the air inlet.

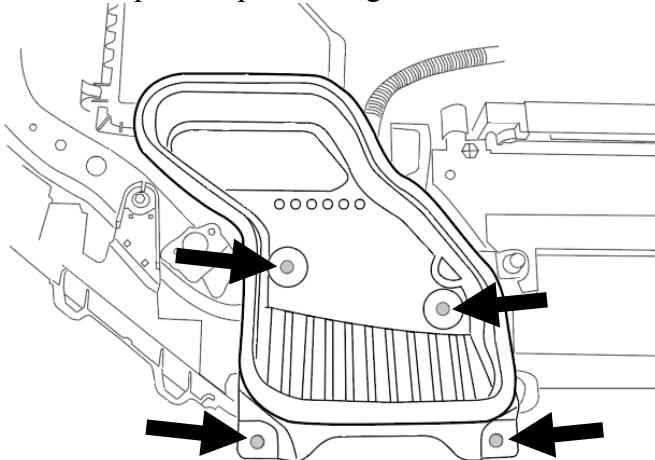

- 3 Use panel tool to disengage bottom clip. Pull logo forward from bottom to disengage top clips. Using a lint free cloth, thoroughly wipe logo area.

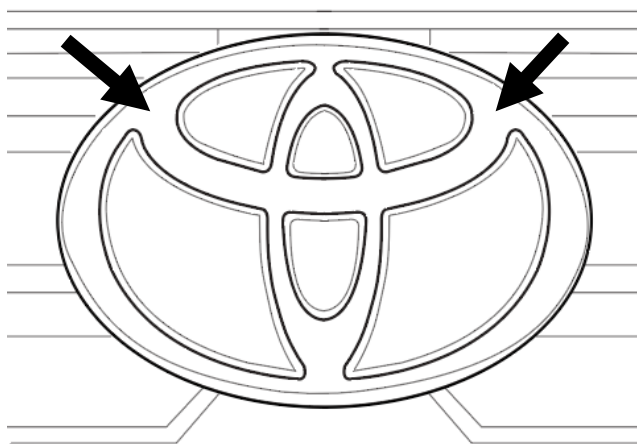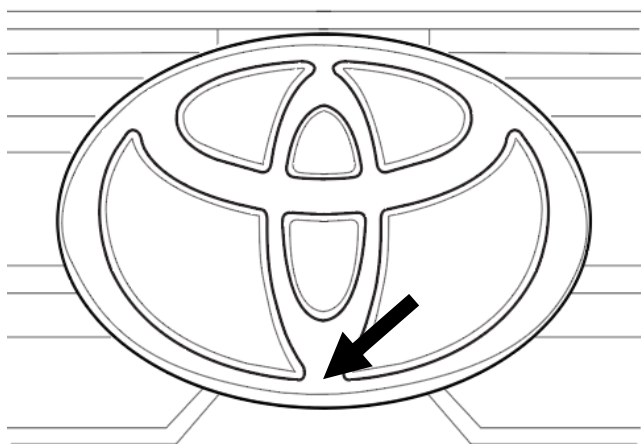


- 4 This is an overview of the harness routing. Routing will start at the badge connector end, and harness layout will move toward the right-side *daytime running light* or DRL.

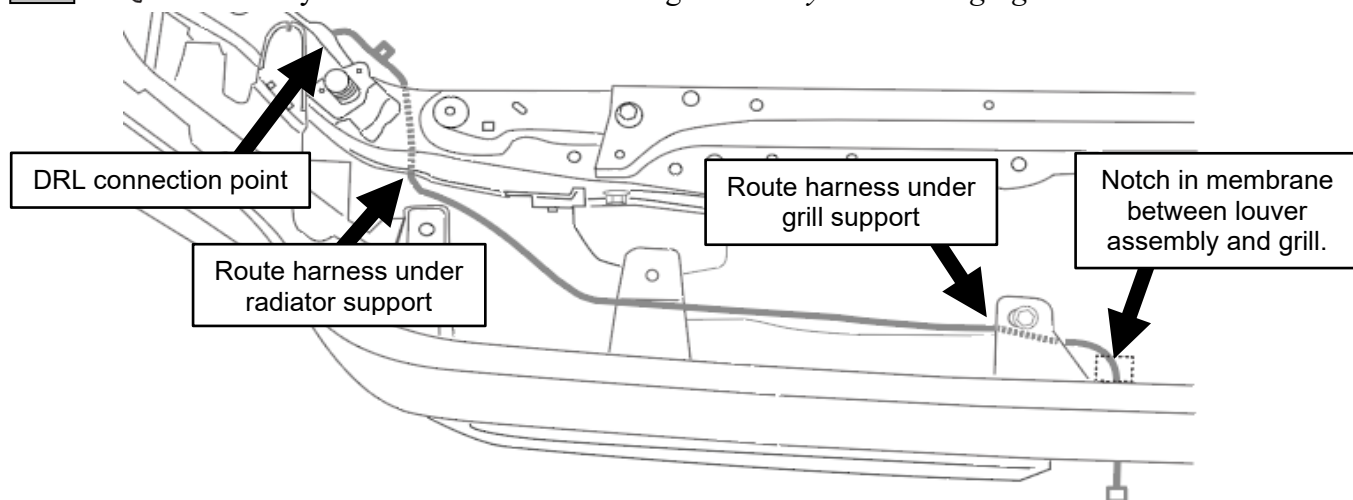

5


Route logo end of harness under grill support.

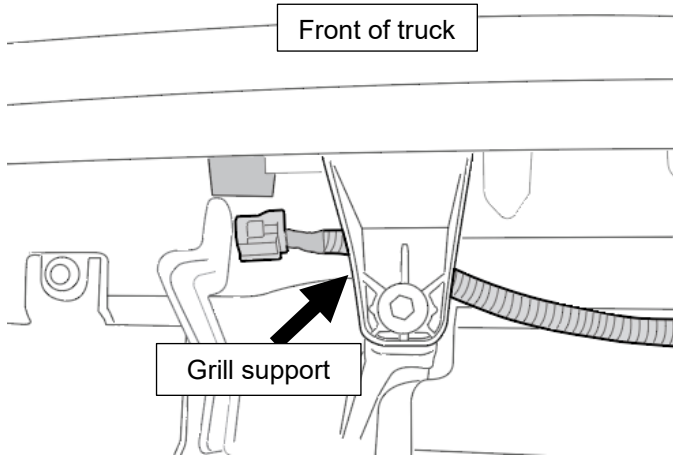

6




Using left hand route harness through membrane notch.

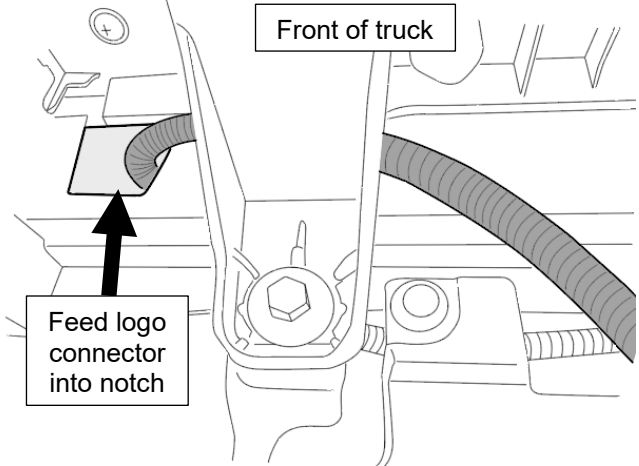

7




Grasp with right hand and pull through.

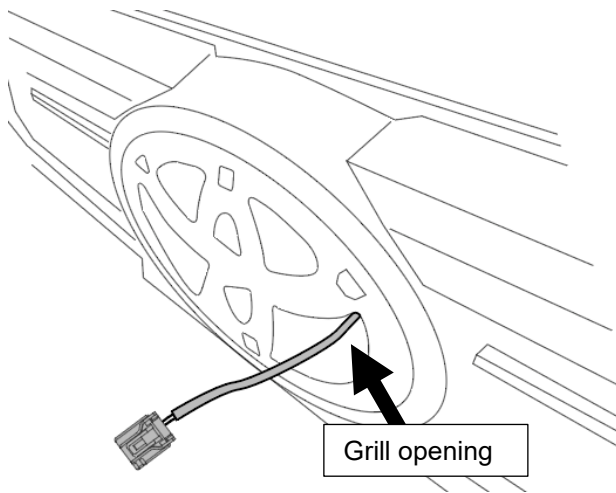

8

Verify correct part number.

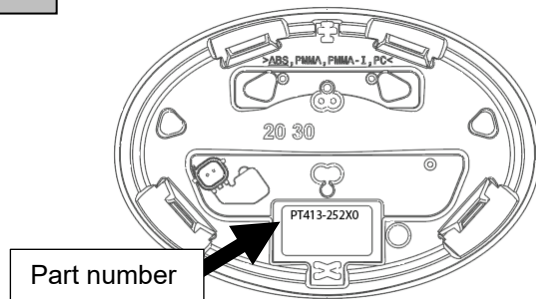


Attention! Logos are meant for specific grilles:

PT413-35240 - TRD SPORT, TRD OFF ROAD  
PT413-35250 - SR5


9

Locate connection point on logo and connect to harness.

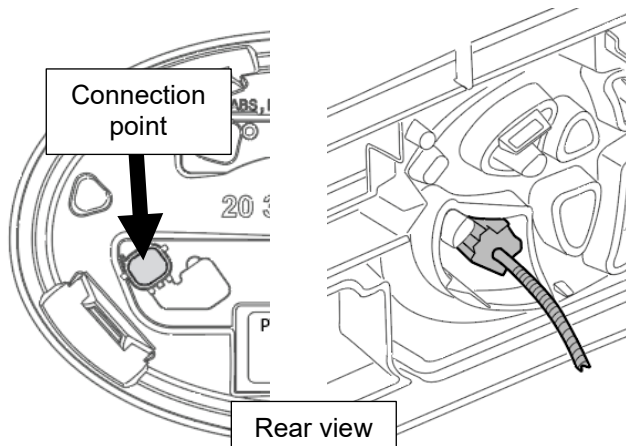


10

With harness connected, snap logo into place.

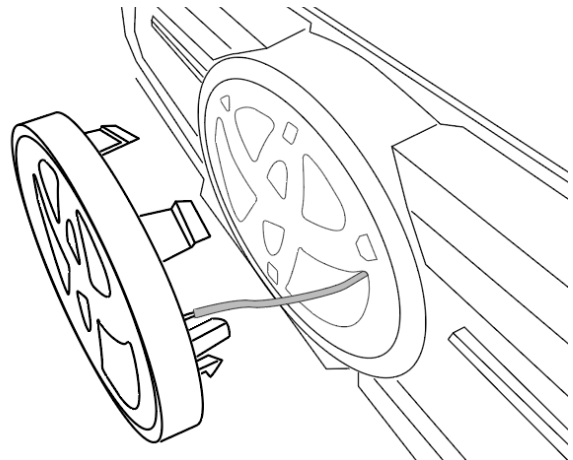


11

Route harness under radiator support towards right DRL.

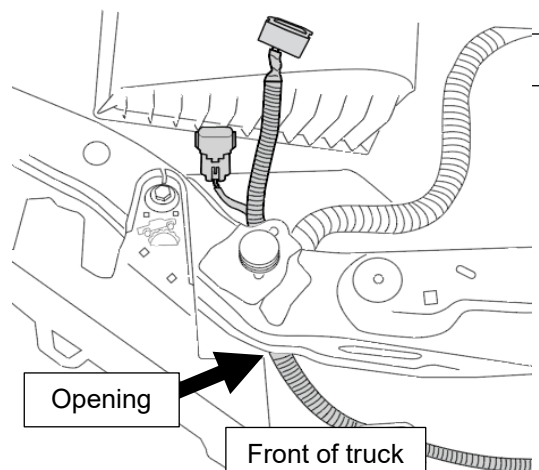


12

Locate DRL 3-pin connector on right-side of headlight housing. Detach DRL connector from headlamp assembly.

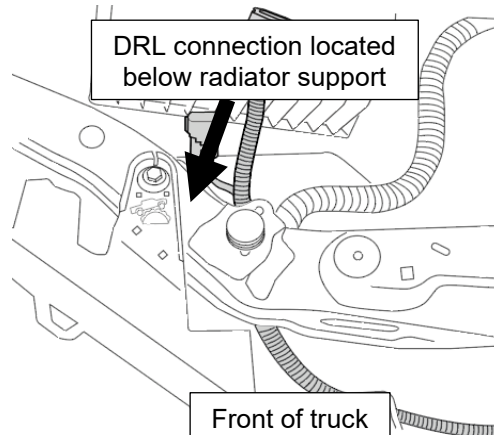


13

Connect DRL connector to illuminated logo harness. Wrap with two (2) foam pads covering any visible wire.

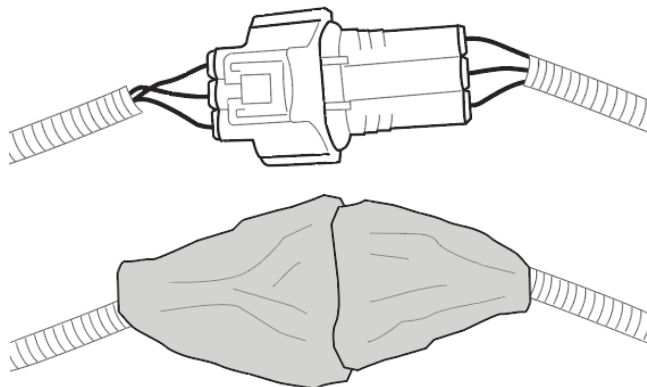


14

Connect the other end of the illuminated logo wiring harness to the DRL.

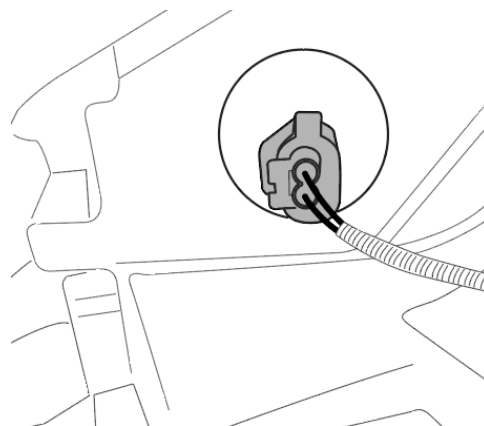


15

Bundle excess harness together, orientating the fuse upwards. Secure with one (1) wire tie. Trim excess.

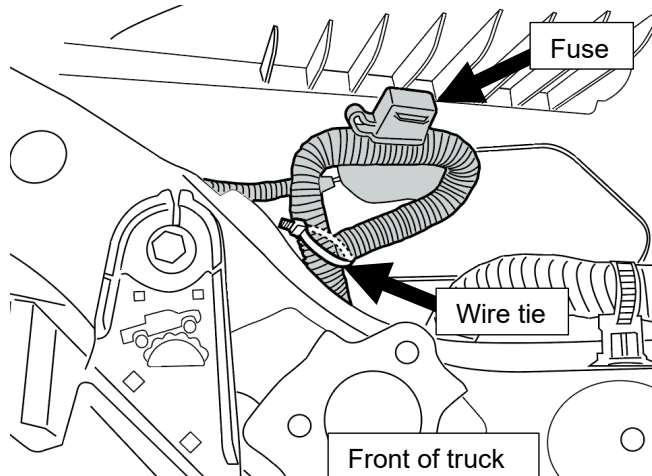


16

Secure bundle with one (1) wire tie making sure fuse is at the top. Tuck connections under the bundle. Trim excess.

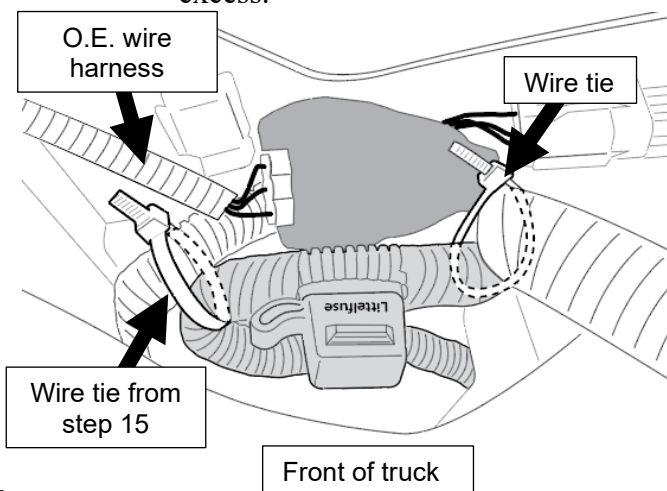


17

Secure harness with three (3) wire ties along vehicle harness in the order shown below. Trim excess.

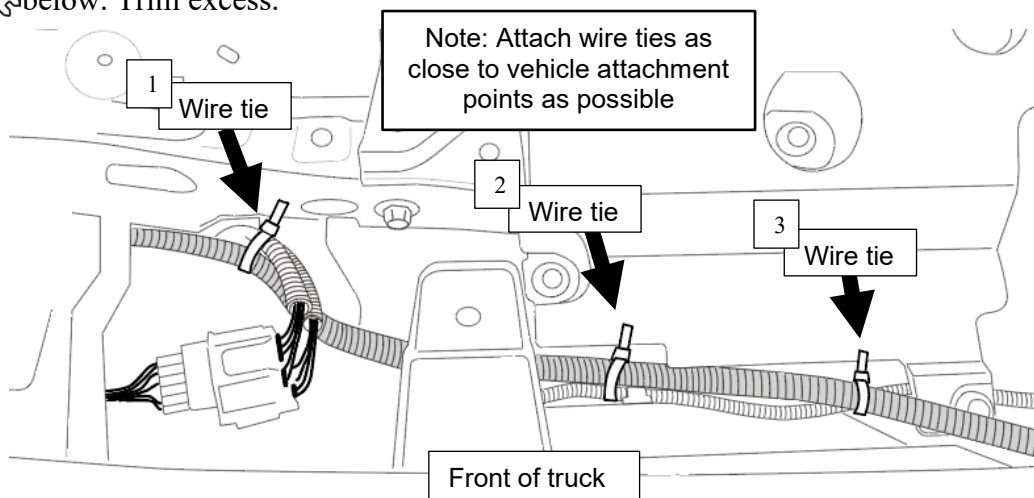


18

Reinstall four (4) push-clips removed in step two.

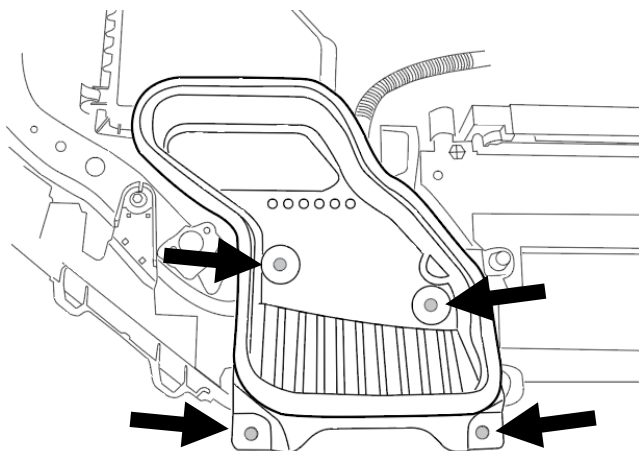

19

Using a ratchet and socket, connect ground terminal to battery.

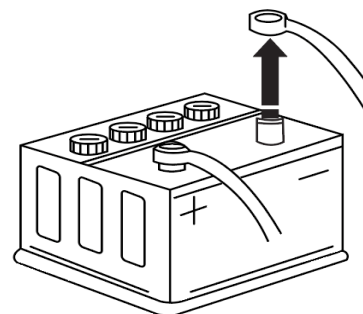

Tighten screw on battery terminal to 5.4Nm (48in-lb)



Caution: Shock hazard present



# TOYOTA TACOMA, HV 2024- EXTERIOR EMBLEM

Checklist – These points **MUST** be checked to ensure a quality installation

Check:

## Accessory Function Checks

- ☐ Correct part number for correct model grille on vehicle.
- ☐ Accessory harness is secure.
- ☐ Logo illuminates when daytime running lights are on.

Look For:

Verify part number on package.

Check that all five (5) wire ties are secure and trimmed.

Check for illumination.

## Vehicle Appearance Check

- ☐ After accessory installation and removal of protective cover(s), perform a visual inspection.

Ensure no damage (including scuffs and scratches) was caused during the installation process.

(For PPO installations, refer to TMNA Accessory Quality Shipping Standards.)